



This document supersedes all printed and electronic Installation, Care and Warranty information previously distributed for Elite SPC.

ELITE FLOORING

Paradigm Performer Plus with MaaXguard

SPC EXTRUDED RIGID CORE

Installation, Care and Warranty

PLEASE READ ALL INSTALLATION INSTRUCTIONS CAREFULLY BEFORE YOU BEGIN INSTALLATION. IMPROPER INSTALLATION WILL VOID WARRANTY.

- Always check the flooring planks for defects such as chips, color or sheen differences under well-lit conditions. Also check that the click channel is clean and free of debris. Always work out of multiple boxes to mix product to achieve proper pattern repeat and color appearance. Color variations between flooring, samples, and replacement material is expected and is not a product defect.
- If the appearance of a board is questionable for either dimensions or appearance, the installer should not use this piece. A replacement carton can be obtained through your dealer in a reasonable time.
- The person installing the floor is responsible to inspect all the flooring before and during its installation. If the installer believes the flooring is not correct due to color, grade, gloss, or any installation issues, the installer should not install this material. The retailer where the flooring was purchased should be contacted to address the issues. Continuing to install the product means that the installer accepted the visually suspect material for installation so the claim will be denied.

NOTE: Paradigm Performer Plus with MaaXguard can be installed above, on and below grade. Paradigm Performer Plus with MaaXguard is installed as a floating floor only. Direct glue down applications requires the removal of the attached pad and a full spread adhesive manufactured exclusively for LVP and LVT. Never use

an adhesive that is recommended for multiple products. We recommend Stauf D737 PSA glue or equivalent. Follow the manufacturer's installation instructions.

Walls, subfloors, and installed floors in buildings and houses move. A minimum of 3/8" gap for expansion is recommended between the installed floor and any adjacent perimeter wall, vertical structure, or wood-based floor (laminated or hardwood).

INSTALLATION

SUBFLOOR PREPARATION

Paradigm Performer Plus with Maaxguard is a waterproof product. Moisture will not damage the product. When installed, it does not produce a moisture barrier, nor does it protect the walls or structure of the home from moisture.

Installing a moisture barrier in a crawl space or under the Paradigm Performer Plus with MaaXguard over a concrete floor can assist with this.

We recommend that a 6-mil poly film with **moisture-resistant** taped seams that are 6" to 8" overlap be installed over a below or on-grade concrete subfloor where there is a concern about water or hydrostatic pressure issues.

Please note that Elite Flooring does not accept claims related to damages or failure of the floor caused by excessive moisture, alkali and/or vapor/hydrostatic pressure. The final responsibility for determining if the concrete subfloor is dry enough to accept the flooring installation lies with the installation company or floor covering installer. Do not install the new flooring over a concrete subfloor with high moisture or hydrostatic pressure conditions if it has not been remediated. Please see below Subfloor Requirements section for moisture limits to protect the home from moisture damage.

JOBSITE PREPARATION BEFORE INSTALLATION

The responsibility for proper subfloor preparation before flooring installation lies with the local flooring installer. Every plank and/or tile must be inspected prior to installation for color variation, finish condition, sheen variation, and quality. This inspection should be conducted with proper lighting available. Any boards that are not acceptable should not be installed. Contact your dealer immediately to obtain replacement boards. ELITE FLOORING is not responsible for the installation of flooring with obvious visual defects.

Crawl spaces – For the protection of the home, when installing a moisture barrier in a crawl space, minimum crawl spaces of 18" are required from the ground to the underside of the joists. A vapor barrier of 6 mil thick polyethylene film with 6" sealed lap joints should be used. Moisture resistant tape should be used as the vapor barrier sealant at the lap joints. Venting for the crawl space should be at least 1.5% of the crawl space square footage. Vents should be located for cross-ventilation of the crawl space. Local regulations should always prevail.

Before floor installation, the room conditions in the installation area (temperature and moisture) should be at normal year-round conditions for at least one week prior to

installation. During and after flooring installation, the installed area should be kept at normal use room conditions. Acclimation is not required before installation unless the product has been stored at high temperatures just prior to installation. Recommended installation room conditions are temperatures between 40 to 110 degrees F. Never install below 40 degrees or above 110 degrees F. Normal room temperatures are use temperatures between 65 degrees and 85 degrees F.

REMOVING OLD ADHESIVES

Asphaltic “cut-back” adhesives can stain SPC flooring. These must be 100% removed, encapsulated or covered with plywood underlayment. Some previously manufactured cutback adhesives contained asbestos fibers, which are not readily identifiable. Do not use power removal devices, which can create dust. The use of solvent-based adhesive removers is never recommended. NOTE: If d-limonene (citrus based) cleaners/removers are used (Orange All), subfloor must be thoroughly rinsed. If complete removal of old adhesives or covering them with plywood is not possible, the use of a Portland Based Leveling or Patching Compound is acceptable. Please follow manufacturer’s instructions carefully.

For “Recommended Work Practices for the Removal of Resilient Floor Coverings” write to the Resilient Floor Covering Institute, 966 Hungerford Dr., Suite 12-B, Rockville, MD 20850.

SUBFLOOR REQUIREMENTS

All subfloors must be dry, structurally sound to support the floor and to protect the home from moisture, free of debris and foreign matter, and flat to 3/16” in a 10-foot radius. The subfloor must be level and not slope more than 1 inch per 6 feet in any direction.

For concrete floors, the subfloor should be firm, flat, **permanently** dry, and clean. This includes both old and new concrete floors. New concrete slabs must cure in well-ventilated conditions for at least 60 days minimum before installing the floor. Concrete should have a minimum-6mil poly film **vapor**/moisture barrier between the concrete and ground. Maximum moisture level per the Calcium Chloride test method is 8lbs. per 1000 cft in 24 hours. The maximum level of relative humidity per ASTM 2170 test method is **80%**. Electronic meter testing is not acceptable as a replacement for the use of these two tests. The pH of the concrete slab should be determined using ASTM F710. The pH test results should measure between 7-10.

These moisture and alkali levels must be met before and remain after the installation of the flooring. It is the responsibility of the flooring installer or contractor to meet these requirements. Elite Flooring does not accept claims related to damages or failure of the floor caused by excessive moisture, alkali and/or liquid or vapor hydrostatic pressure. Do not install the new flooring over a concrete subfloor with high moisture, alkali or hydrostatic pressure conditions if it has not been mitigated or remediated. If moisture mitigation or remediation are required, the choice of technique to mitigate (concrete slab sealing, installation of 6 mil poly film under the flooring, etc) is the sole responsibility of the flooring installer or contractor.

The concrete subfloor must be smooth and free of roughness, excessive texture, irregularities in height, and abrupt elevation changes.

The subfloors must be free of any contaminants, harmful substances or foreign materials that could reduce adhesion, adversely impact the installed plank performance or rate of moisture dissipation from the subfloor or cause the installed flooring to discolor.

All pre-existing tiles and other approved floor coverings must be well bonded to the base subfloor. Ceramic, quarry, terrazzo, and similar types of tiles require filling of grout joints and imperfections using floor patching materials in commercial installations. The filling of grout joints is not usually required for residential installations. If the product is glued down, the grout joints will need to be filled. It is key that the subfloor flatness tolerance be met to accept all installations.

For plywood, OSB, and particleboard subfloors to be acceptable for flooring installation, they must be dry (maximum 12% moisture content) and properly secured to accept a top floor. The maximum subfloor deflection allowed must not be more than L/360. The subfloor must be secured every 6" along joists with nails or screws to avoid deflection or excessive vertical movement of the subfloor. Subfloor deflection may cause squeaking or popping sounds in both the subfloor and the installed floor. Our warranties do not cover any flooring issues caused by inadequate substructures. The subfloor must be level and flat per the specification and tolerance stated. High spots must be ground down and low spots must be filled with a Portland cement leveling compound.

Subfloors must be dry and properly secured to accept a top floor. The subfloor must be secured every 6" along joists with nails or screws to avoid deflection or excessive vertical movement of the subfloor. This condition may cause squeaking in both the subfloor and the installed floor. Our warranties do not cover any flooring issues caused by inadequate substructures or improper installation of substructures. The subfloor must be level and flat. High spots must be ground down and low spots must be filled with a Portland cement leveling compound.

Please note that Paradigm Performer Plus with MaaXguard is not approved for installation over any type of carpet.

NOTE: Never install Paradigm Performer Plus with MaaXguard over any type of floating floor. All subfloors that are not concrete must be firmly bonded.

NOTE: Never install Paradigm Performer Plus with MaaXguard over a below grade VCT (vinyl composition tile).

Tiles including ceramic, resilient, and sheet vinyl must be well bonded to the subfloor, must be level and flat, and must be clean. Existing vinyl floors should not be sanded as they may contain asbestos.

INSTALLATION TOOLS

Safety Glasses
Broom/Vacuum
1/4" spacers

Pull bar
Saw
Utility knife
Pencil
Tape measure
Ruler
Chalk string
Tapping block

ACCEPTABLE SUBFLOOR TYPES

CDX Underlayment Grade Plywood (minimum of 5/8" thickness)
Underlayment Grade Particleboard (only for floating installation)
OSB (minimum 3/4", 23/32" thickness)
Concrete slab
Ceramic Tile – one layer well Bonded
Resilient Tile – one layer well bonded (Not Below Grade)
Sheet Vinyl – one layer well bonded

DO NOT INSTALL OVER

- VCT installed on below grade concrete.
- Existing cushion-backed vinyl flooring
- Carpet
- Rooms with sloping floors or floor drains
- Wood underlayment's or hardwood flooring that has been installed directly over concrete.
- Do not install over any floating floor.

BASIC INSTALLATION FOR PARADIGM PERFORMER PLUS


While Paradigm Performer Plus with MaaXguard is dimensionally stable, buildings, walls, and existing hardwood and laminate floors will expand and contract. Because of this, we recommend for all installations, both floating floor and glue down types, that an expansion gap of at least **3/8"** be left for expansion between Paradigm Performer Plus with MaaXguard, any vertical surface, an adjacent perimeter wall or wood-based floor (laminate or hardwood).

As stated earlier, always work out of multiple boxes to mix product to achieve proper pattern repeat and color mix for the look of natural wood. A minimum of 3 boxes of product is recommended. Inspect each plank or tile in good light for visual defects. If they show visual faults or damage, do not install them. It is the responsibility of the installer to ensure that the appearance of the finished floor meets the consumer's expectations.

Paradigm Performer Plus with MaaXguard is an indoor product. It will not be warranted when installed in locations or conditions not recommended for this product.

INSTALLATION OF PARADIGM PERFORMER PLUS WITH MAAXGUARD USING UNILIN ANGLE-TAP LOCKING SYSTEM

This locking system is designed to be installed utilizing the floating method. Always include the proper expansion space. Undercut all doorjamb. Never fasten moldings or transition strips to the planks. When product is stored at the installation site, it should be stored in the room where it will be installed.

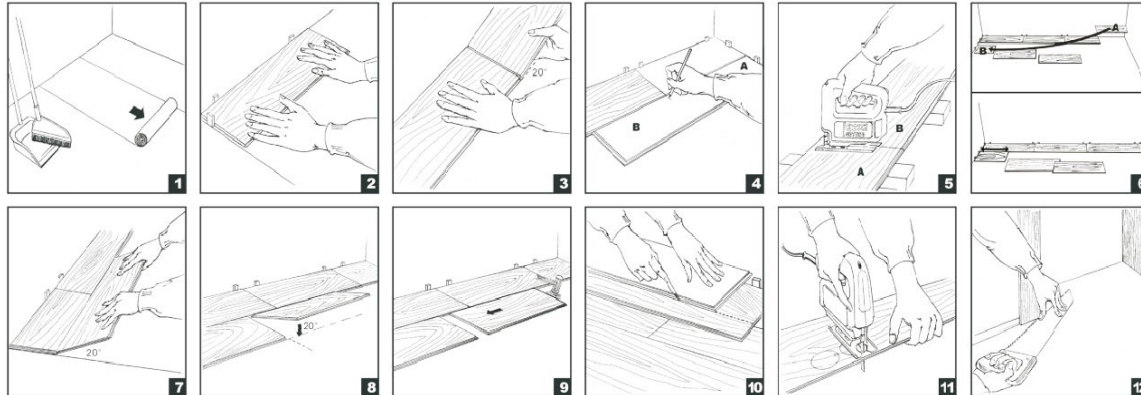

- A. Before installing the floor, confirm that the room and walls are straight and square. Where possible, use an outside wall to start your installation. Measure **3/8"** from each end of the starting wall and snap a chalk line to leave a straight starting line on the subfloor. The **3/8"** spacing will confirm the expansion space required for the installed floor. It also shows whether the wall is straight or bowed. The chalk line is to be used as the guide for installation. If the wall is not straight, follow the chalk line for the first-row plank installation to take this into account.

If your product requires a separate pad, please refer to picture #1. When using a product with attached pad, please start at picture #2.

- B. Remove the tongue on the side of the panels that face the wall. This will ensure that the decorative surface of the SPC floor is well under the finished trim when installed. Use a utility knife to score through the tongue several times until it easily snaps off. Start in a room corner by placing the first panel with its trimmed side facing the wall. Leave expansion space along each wall to maintain a gap of $\frac{1}{4}$ " between the wall and the flooring.
- C. To attach the second panel, insert the end tongue of the panel into the end groove of the first panel at a 20-degree angle. Lower the panel flat to the floor. Align the edges carefully.
- D. Continue connecting the first row of planks until you reach the last full panel. Fit the last panel by rotating the panel 180 degrees with the pattern side upward, place it beside the row, and mark it.
- E. Saw off the excess plank. Attach as described above.

- F. Begin the next row with the off-cut piece from the previous row to stagger the pattern. Pieces should be a minimum of 20cm (8") long and joint offset should be at least 20cm (8").
- G. Start the second row by pushing the long side tongue of the panel into the long side groove of the very first panel at about a 20-degree angle. When lowered, the plank will click into place.
- H. Attach the second panel of the new row on the short side as described above. Then attach the long side of the panel and lightly tap both the short and long panels to engage.
- I. To fit the last row, lay a panel on top of the previous row. With the tongue to the wall, lay another panel upside down on the one to be measured and use it as a ruler. Don't forget to allow room for **3/8"** spacers. Cut the panel and attach it into position.
- J. Door frames and heating vents also require expansion room. First cut the panel to the correct length. Then place the cut panel next to its actual position, use a ruler to measure the areas to be cut out, and mark them. Cut out the marked points allowing for necessary expansion distance on each side.
- K. Door frames can be trimmed by turning a panel upside down and using a handsaw to cut away the necessary height so that panels slide easily under the frames.

Paradigm Performer Plus with MaaXguard can be full spread glued down. When full spreading Paradigm Performer Plus with MaaXguard that has an attached pad, the pad must first be removed from the planks before gluing the product to the subfloor. Elite Flooring Solutions recommends the use of Stauf D-737, LVP-777, or Taylor 2091 Pinnacle PSA type adhesives or equivalents for full spreading SPC. Please see the manufacturer's instructions for proper installation methods. **Where the use of a caulk is needed, we recommend a 100% silicone caulk and do not approve the use of acrylic caulks. High quality silicone caulks remain flexible and will allow the installed floor to continue to float and move with temperature changes whereas acrylic caulks will harden over time and stop this from occurring.**

Paradigm Performer Plus with Maaxguard is an attached pad product. The click side and end joints are designed to work with this specific pad. Elite Flooring does not warrant the product with additional pad being installed under the product.

REPAIRS

Paradigm Performer Plus with MaaXguard flooring is durable; however, planks can be damaged. If the damaged plank is near the perimeter of the room, the best technique is to carefully unlock the planks until the damaged plank is removed. Replace the

damaged plank and reassemble the flooring. If the damaged plank is in the center of the room, then the following procedure should be followed:

1. Use 3M Blue Tape around the perimeter of the damaged plank to be replaced to protect the surrounding planks from damage.
2. Using a utility knife, make a cut completely through the center of the damaged plank the length of the plank.
3. Carefully remove the cut pieces of the damaged flooring and clean and vacuum the exposed area.
4. Use a utility knife to remove the tongue from the long and short side of the replacement plank.
5. Remove 1.5 inches of the groove on the long side of the plank from the tongue end using a utility knife.
6. Apply a small bead of an Ethyl Cyanoacrylate adhesive super glue to the groove of the planks in the floor.
7. Insert the replacement plank into the exposed area locking the long-grooved side into the existing floor. The tongue end of the replacement plank will overlap the existing floor until the plank is completely inserted.
8. Use a scrap piece of the flooring as a tapping block to lightly tap the groove end into place. Use a utility blade to adjust the opposite end as you tap the end joint together.
9. Weight the plank down until the super glue is completely set.

FINISHING MOLDING



T-Molding



Reducer



Stair Nose



Quarter Round



End-Molding

Reducer molding is used to finish flooring when the adjoining surface is lower than the Paradigm Performer Plus with MaaXguard flooring or when flooring meets carpet. Position the U track 7mm leaving expansion gap of at least **3/8"** from each edge of the plank. Screw, nail or glue down the track directly to the subfloor and then insert the reducing strip into the track.

T-molding is used to finish flooring and add expansion when two level surfaces meet in doorways. Install the same as above. Residential Installations do not require the use of T Moldings.

Commercial installations are recommended to install T-moldings in every doorway and if the maximum room run size is equal to or greater than 100 ft x 100 ft. Minimum of **3/4"** of perimeter expansion space is recommended for large commercial rooms.

Landing molding is used to finish flooring on landings or stair edges. Moldings need to be glued and screwed down to the sub-floor for safety and stability. Color fill should be used to cover counter sunk screws.

To finish the perimeter of the room, install quarter round molding using finishing nails. Quarter round molding is nailed directly into the baseboard.

RADIANT HEATED FLOORS

Floating floors can be installed over certain types of radiant heated floors. If glue down is an option, then follow the manufacturer's installation instructions when full spreading our flooring with an approved glue.

WHEN INSTALLING OVER A RADIANT HEATED FLOOR:

1. A newly installed radiant heated floor must be operational for at least four (4) weeks prior to the installation with the temperature set between 65 to 85 degrees F to ensure that the subfloor has been dried.
2. Existing radiant heated floors should be set to a minimum temperature of 65°F (18.3°C) degrees F for a minimum of 4 days before, during and 48 hours after the completion of the installation. This will ensure that the flooring will acclimate properly before the installation begins. Upon completion of the installation, gradually increase temperature in increments of 5° F per hour until desired temperature is achieved. Never exceed 85 degrees.
3. Wood subfloors should never exceed 10% moisture content as measured by a calibrated wood moisture meter.
4. Concrete subfloors must be permanently "dry" using the mat test, a calibrated concrete moisture meter, Calcium Chloride Test or a RH Probe.
5. Ground floors using the radiant heating system should have a proper moisture barrier beneath it.
6. The recommended range of relative humidity is 35%-55% and the room temperature should be between 65-85 degrees F for the delivery of the flooring, acclimation, and installation.
7. The flooring must acclimate at the stated temperature range for at least 48 hours prior to installation in the room to be installed.
8. Keeping the temperature of the room constant will keep a stable environment for the flooring as well as the home.
9. The floor surface temperature must always stay below 85 degrees F.
10. At no time should the relative humidity in the room with the installed flooring fall below 30% during the life of the product.
11. **Electric Radiant Floors** consist of electric cables (or) mats of electrically conductive materials mounted on the subfloor below the floor covering. We recommend that the heating elements be separated from the flooring by a distance of at least ½".

Maximum operating subfloor temperature should never exceed 85°F. Subfloor levelers used to install electrical radiant floors should have a minimum of 3000 psi compressive strength. **Follow the electric radiant floor manufacturer's installation instructions.**

SUN ROOMS

Sunrooms or areas that may be isolated from the main living area of the home are recommended areas of use for Paradigm Performer Plus with MaaXguard if they are limited to 500 sf maximum.

If there will be no heat in the wintertime and you wish to use the area, you must bring the room to normal room temperature (65-85 degrees F) before walking on the floor.

Exposure of the floor to prolonged periods of sunlight is not recommended. Drapes and/or blinds are recommended for use during peak sunlight periods. Prolonged direct sunlight exposure can result in discoloration, and excessive temperatures may cause tile/plank expansion or delamination.

During installation, please leave the **3/8"** expansion at all walls and any vertical surface in this room.

CABINETS

Cabinets may be installed on top of Paradigm Performer Plus with MaaXguard if they are wall mounted.

Center Islands may be installed on top of Paradigm Performer Plus with MaaXguard if they are free standing.

If cabinets or center Islands are being fastened to the floor a **3/4"** expansion hole must be used where the bolts enter through the Paradigm Performer Plus with MaaXguard into the subfloor.

Cabinets and Center Islands may be installed on Paradigm Performer Plus with MaaXguard and fastened if the product is full spread. Any attached pad must be removed from the plank before full spreading adhesive.

POOL TABLES

Pool tables in a residential environment may be installed on Paradigm Performer Plus with MaaXguard either full spread glue down or floating. In a residence, there is a limit of one pool table per room.

Pool tables in a commercial environment over Paradigm Performer Plus with MaaXguard must be full spread. When full spreading Paradigm Performer Plus with MaaXguard that has an attached pad, the pad must first be removed from the plank before gluing the product to the subfloor.

Multiple pool tables in residential or commercial environments over Paradigm Performer Plus with MaaXguard must be full spread glue down.

When full spreading Paradigm Performer Plus with MaaXguard that has an attached pad, the pad must first be removed from the plank before gluing the product to the subfloor.

CARE AND MAINTENANCE

Once the floor has been installed, vacuum or use a dust mop to clear the floor of any loose dirt or residual dust or debris. The floor can be wiped with neutral pH cleaners or water.

Furniture should have felt pads attached to the feet to avoid scratching the floor.

Heavy appliances or furniture should sit on non-staining large surface flooring protectors.

When furniture has castors or wheels on the feet, they must be suitable for resilient floors, large surface non-staining, and swivel easily. Do not use ball-type castors because they can damage the floor. Castor wheels should be equipped with wide, rubber castors. **The use of a protective mat is recommended in areas with rolling chairs such as near desks.**

Protective mats should be non-staining as rubber mats may discolor the floor.

All furniture pieces should have floor protectors under them.

Walk-off mats should be used in entrances to help prevent dirt from being carried onto the floor.

Exposure of the floor to prolonged periods of sunlight is not recommended. Drapes and/or blinds are recommended for use during peak sunlight periods for all floors and in sunrooms. Prolonged direct sunlight exposure can result in discoloration, and excessive temperatures may cause tile/plank expansion or delamination.

Regularly sweep or vacuum the floor to remove dirt and dust. Do not use a vacuum with a beater bar to vacuum the floor as this can cause floor scratches.

Do not use hard bottomed electric brooms without padding as they can scratch the floor.

If domestic pet urine, feces, or vomit contacts the floor, it should be removed and cleaned immediately from the affected area. If left on the floor, it may dull the finish.

Liquid spills and any wet areas should also be cleaned in a timely manner. The floor can be damp mopped with clean warm water and a dilute floor cleaner as needed. Do not use harsh cleaners or chemicals, abrasive scrubbing pads, abrasive tools, or abrasive cleaners as they can scratch the floor. Do not use detergents and do not use floor shining products like "mop and shine" types on the floor.

Petroleum-based products can stain the surface of your vinyl floor. These include materials like asphalt driveway sealer and engine motor oil, among others.

STEAM CLEANERS

Elite Flooring does not recommend the use of any type of steam cleaner on our floors. These types of cleaners generate too much moisture and heat during their use. The resulting moisture and heat can be enough to break down any adhesives used in the manufacturing of this product. Also, in instances where no glue is used, both peaked and swelled plank or tile edges can occur. Therefore, all complaints that are determined to be from a consumer using a steamer will be denied by Elite Flooring.

WARRANTY INFORMATION

PARADIGM PERFORMER PLUS WITH MAAXGUARD EXCLUSIVE LIMITED WARRANTY

Paradigm Performer Plus with MaaXguard planks and tiles are warranted to be free from any visual or manufacturing defects. If the products are found to be defective, Elite Flooring will supply new product of the same or similar style, size, color, grade, and gauge to repair or replace the defective area and will pay reasonable labor costs provided the flooring is professionally installed and maintained according to the installation instructions provided. All product purchased for an installation should be inspected by you and/or your installer. Pieces that appear to be visually defective should not be installed. Elite Flooring will not be responsible for reimbursing labor charges on any claim for visually defective product installed. It is the responsibility of the installer to determine the suitability of the product for installation before it is installed.

If a problem occurs during the installation of the planks and tiles, the job should be stopped immediately. The proper action is to immediately report the problem to your dealer and distributor who, in turn, will contact Elite Flooring Solutions. Any costs caused by continued installation after the problem is reported will not be covered by Elite Flooring.

Products that are non-defective but are damaged during an improper installation by not following the Elite Flooring installation guidelines do not constitute a valid claim as defined by this limited warranty. This warranty will not include loss of time, inconvenience, incidental expenses (such as telephone calls, removal and replacement of items placed over the floor after the original installation, etc.) included in the removal and reinstallation of the affected material, and any other incidental or consequential damages. Elite Flooring reserves the right to inspect any claim and/or request photographs and/or samples associated with the specific claim prior to approving any claim. All limited warranties are valid for the original purchaser of the flooring only and are not transferrable.

PARADIGM PERFORMER PLUS WITH MAAXGUARD WEAR LIMITED WARRANTY

Paradigm Performer Plus with MaaXguard planks and tiles are protected with a wear layer and are warranted that there will be no wear-through of the wear layer for the number of years indicated for the specific product. "Wear-through" means complete loss of the wear layer so that the printed color layer is changed or affected. The term for your specific product wear Limited Warranty will appear on the insert of the product you purchased. This Limited Warranty applies only to first quality merchandise provided the recommended installation and maintenance procedures are followed as outlined in the Installation Instructions and Owner's manual.

PARADIGM PERFORMER PLUS WITH MAAXGUARD WATERPROOF LIMITED WARRANTY

Paradigm Performer Plus with MaaXguard planks and tiles are warranted to be 100% waterproof. The structural integrity of the planks or tiles, when properly installed and under normal use conditions, will be resistant to damage caused by exposure to water for the life of the product. Normal use conditions means normal cleaning, everyday spills, and moisture overflow from normal use conditions.

Mold and/or mildew can sometimes occur in a building if moisture issues are not addressed. This moisture warranty excludes damage resulting from the growth of both mold and/or mildew due to extended moisture exposure.

While Paradigm Performer Plus with MaaXguard planks and tiles are waterproof, the floor is not a waterproof barrier for the subfloor and surrounding structure. The moisture warranty does not cover damage caused by liquid/vapor hydrostatic pressure from the subfloor, flooding, household leaks (such as pipes), or mechanical failures like appliance and heating equipment leaks.

If the planks and tiles are structurally damaged and the cause is determined to be by exposure to water in normal conditions, Elite will arrange a credit subject to the terms as described below in the “Terms of Lifetime Limited Warranty” section. The term for your specific residential product Limited Warranty will appear in the carton insert of the product you purchased. For commercial installations, Paradigm Performer Plus with MaaXguard plank and tile damage caused by exposure to water will be subject to a pro-rated credit as described below in the “Terms of Lifetime Limited Warranty” section.

Paradigm Performer Plus with MaaXguard Waterproof Limited Warranty does not cover:

1. Any damage to structures that are not part of the installed SPC flooring such as damage to surrounding walls, subfloor, structures, fixtures, furniture, underlayment, moldings, trims, and subfloor heating systems, or anything that is not the tile or plank.
2. Any damage from mold and/or mildew growth due to extended water exposure.
3. Flooring that is installed outdoors.

PARADIGM PERFORMER PLUS WITH MAAXGUARD PET STAIN LIMITED WARRANTY

Paradigm Performer Plus with MaaXguard planks and tiles are warranted to resist stains caused by pet soiling from domestic dogs and cats during the specific warranty time frame. Pet soiling includes urine, feces, and vomit on the flooring. Resisting stains means that your floor has the ability to minimize or hold out permanent stains under the conditions stated. For the warranty to remain in effect, clean any affected area immediately. Any damage to the subfloor and/or surrounding structure caused by pet soiling is not covered by this warranty. This warranty does not cover staining caused by

pet soiling from any other type of pet besides domestic dogs or cats. Please follow our maintenance procedures for cleaning the affected areas.

PARADIGM PERFORMER PLUS WITH MAAXGUARD PET SCRATCH LIMITED WARRANTY

Paradigm Performer Plus with MaaXguard is warranted to resist scratches caused by domestic dogs and cats. It is understood that no floor is scratch-proof. For the purposes of this warranty, fine scratches that are limited to the clear protective layer of the floor are considered normal wear and tear. If your dog or cat causes deep scratches that penetrate through the clear protective layer and affect or damage the design layer of your floor, Elite Flooring will replace the affected area of your Paradigm Performer Plus with MaaxGuard floor (maximum one replacement per consumer). Any scratch that is not from a dog or cat is not covered by this warranty.

PARADIGM PERFORMER PLUS WITH MAAXGUARD INTERNET WARRANTY

Various retailers on the internet sell our waterproof flooring products. While some websites are operated by retailers that maintain physical stores and provide excellent service, other websites are operated as internet-only retailers that do not provide service. If you choose to purchase your products from an internet-only retail provider, please be advised that such products will be covered by a 1-year warranty for manufacturing defects.

Warranty claims for anything other than an initial defect of the product are explicitly excluded. None of our installers, retailers, distributors, or employees has the authority to alter the obligations, limitations, disclaimers, or exclusions under any of our warranties. There are no other warranties beyond this expressed limited 1-year warranty.

TERMS OF LIMITED COMMERCIAL WARRANTY

Claims reported on material defects of this flooring will be prorated over the life of the product. Reasonable labor costs will be paid with the following exceptions:

- Claims reported after 1 year of use will pay labor charges at the rate of 50% reasonable labor charges.
- Claims reported after 5 years of use will not pay labor charges.

This warranty shall not include loss of time, inconvenience, incidental expenses (such as telephone calls and removal and replacement of items placed over the floor after the original installation) included in the removal or reinstallation of the affected flooring materials, and any other incidental or consequential damages.

This warranty is in lieu of any other warranties expressed or implied.

This warranty service is available only by notice to your distributor through the dealer from whom the purchase was made. Notification must be accompanied by a copy of the original invoice and can only be authorized by your distributor.

Limited Warranty Exclusions and Conditions

- Commercial use means daily activities commonly associated with a commercial environment. Hill Rom Beds are not recommended.
- Warranty coverage for any replacement flooring planks will be limited to the remaining time of the original warranty.
- Warranty coverage does not apply to seconds, off-quality, or “as-is” goods.
- Warranty coverage applies only to the original purchaser of the flooring and the original installation site, is non-transferrable, and prorated by time of use.
- Warranty coverage does not apply to conditions or defects caused by improper installation, the use of improper materials during installation, or inadequate sub-flooring preparation as described in the Owner’s Manual.
- Warranty does not apply to damages or failure of the floor due to excessive moisture, alkali and/or vapor/hydrostatic pressure.
- Warranty coverage does not apply to construction-related damage.
- Warranty coverage does not apply to color variations between samples or printed illustrations and the actual production runs.
- Warranty coverage does not apply to reduction of gloss from use or improper maintenance.
- Warranty does not cover changes in color or sheen from exposure to sunlight or due to rubber-backed mats.
- Warranty coverage does not apply to product sold through unauthorized dealers.
- Warranty coverage does not apply to conditions caused by using steam cleaners.
- Warranty does not apply to damage that results from not following floor maintenance instructions.
- Warranty does not apply to damages resulting in scuffs, scratches, cuts, staining from rubber-backed mats, or damages or discoloration from carpet dyes, fertilizer, asphalt from driveways or chemicals.
- Warranty does not apply to damages caused by burns, flooding, fires and other accidents.
- Warranty does not apply to damage caused by abuse (such as dragging heavy or sharp objects across the floor without proper protection for the floor or with heavy wheeled vehicle traffic that can permanently indent or damage the flooring).
- **Warranty does not apply to damage caused by wheelchairs.**
- Warranty does not apply to damage caused by caster wheels or vacuum cleaner beater bars.
- Warranty does not apply to failure to support furniture with floor protectors made of non-staining felt.
- or non-pigmented hard plastic.
- Warranty does not apply to discoloration from heat or sunlight.
- “Wear-Through” means complete loss of the wear layer so that the printed pattern or design of the floor is altered.
- “Residential use” means daily activities commonly associated with residential use.

If you have any questions regarding the above information, please contact your local flooring dealer or distributor.

REV: 03-24-2023